

FURNITURE COMPONENTS UK LIMITED (FCUK LTD)

FCUK LTD are a furniture components provider supplying a hinge through to a complete project. As a result of this the options available to you are extensive, providing you ultimately with what is probably the greatest flexibility for design.

As there are so many configurations of cabinet specification available to you this document is designed to assist you in selecting from the most common of cabinet options. Please advise if you do not see what you are looking for and we will assist as appropriate.

Some frontal collections that we have available are standard sizes only. Where bespoke 'made to order' sizes are available this will generally be confirmed on the actual product page on our website.

PRODUCT FEATURED ON OUR WEBSITE IS ONLY A SELECTION OF WHAT WE HAVE AVAILABLE!

NOTES TO CONSIDER IN USING THIS DOCUMENT:

** Line drawings are for visual purposes only and do not constitute any agreed specification.

** Once you have selected your frontal collection, always check that the frontal sizes that you require are available as you progress.

** Each product section gives an indication of frontal (doors/drawers) sizing to create a complete cabinet

** Each product section gives our recommended hinge and fittings to create a complete cabinet. Alternatively you can select from the wider range of product available on our website.

** FCUK LTD has many fittings available, however, inputting the recommended product code(s) as detailed will help you to locate the most common/practical fittings for the cabinet(s).

** Appliance housings require the appliance aperture requirements to be detailed to us if we are to supply in RIGID cabinet format. Our flat packed product is universal and will cater for most appliance arrangements, though you may need to consider extra panels just in the case of need an extra shelf or two.


** The standard hinge set up is 'non soft close', however, with many now wanting the 'soft close' versions we have detailed both options in each product section.

** Circle the hinge/fitting type that you require in each section and enter the quantity needed in the box. Hopefully this will assist you in collating the total number of hinges/fittings need to complete your design.

** Please be reminded of our 'delivery area' information as detailed on our website.

For further information and/or assistance please call our office or email your requirements and we will be happy to assist.

SINGLE & DOUBLE DOOR BASE CABINET

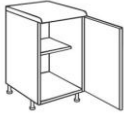

FRONTALS

1No. 715 height x cab width



FRONTALS

2No. 715 height x cab width

HINGES:

Each door requires 2No. 110 degree hinges
 Each door requires 2No. Back plates (Either 0mm/2mm)

RECOMMENDED PRODUCT CODES

	STANDARD	SOFT CLOSE
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625

QTY

SINGLE & DOUBLE DOOR BASE CABINET WITH DRAWER(S)



FRONTALS

1No. 140 height x cab width
 1No. 570 height x cab width



FRONTALS

2No. 140 height x cab width
 2No. 570 height x cab width

HINGES:

Each door requires 2No. 110 degree hinges
 Each door requires 2No. Back plates (Either 0mm/2mm)


RECOMMENDED PRODUCT CODES

	STANDARD	SOFT CLOSE
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625

DRAWER BOXES: (shallow)

	STANDARD	SOFT CLOSE
300mm wide cabinet requires 1No. 300mm drawer box	24/DM.S45.30W	71/STDSIL:300/70/30
400mm wide cabinet requires 1No. 400mm drawer box	24/DM.S45.40W	71/STDSIL:400/70/30
450mm wide cabinet requires 1No. 450mm drawer box	24/DM.S45.45W	71/STDSIL:450/70/30
500mm wide cabinet requires 1No. 500mm drawer box	24/DM.S45.50W	71/STDSIL:500/70/30
600mm wide cabinet requires 1No. 600mm drawer box	24/DM.S45.60W	71/STDSIL:600/70/30
800mm wide cabinet requires 2No. 800mm drawer box	24/DM.S45.40W	71/STDSIL:400/70/30
900mm wide cabinet requires 2No. 900mm drawer box	24/DM.S45.45W	71/STDSIL:450/70/30
1000mm wide cabinet requires 2No. 1000mm drawer box	24/DM.S45.50W	71/STDSIL:500/70/30
1200mm wide cabinet requires 2No. 1200mm drawer box	24/DM.S45.60W	71/STDSIL:600/70/30

TWO DRAWER BASE CABINET



FRONTALS

2No. 355 height x cab width

DRAWER BOXES: (Deep pan)

	STANDARD	SOFT CLOSE
400mm wide cabinet requires 2No. 400mm drawer box	24/DM.D45.50W	71/PANSIL:400/70/30
450mm wide cabinet requires 2No. 450mm drawer box	24/DM.D45.50W	71/PANSIL:450/70/30
500mm wide cabinet requires 2No. 500mm drawer box	24/DM.D45.50W	71/PANSIL:500/70/30
600mm wide cabinet requires 2No. 600mm drawer box	24/DM.D45.60W	71/PANSIL:600/70/30
800mm wide cabinet requires 2No. 800mm drawer box	24/DM.D45.80W	71/PANSIL:800/70/30
900mm wide cabinet requires 2No. 900mm drawer box	24/DM.D45.90W	71/PANSIL:900/70/30
1000mm wide cabinet requires 2No. 1000mm drawer box	24/DM.D45.100W	71/PANSIL:1000/70/30
1200mm wide cabinet requires 2No. 1200mm drawer box	71/PANSIL:1200/70/30	

TWO DRAWER BASE CABINET WITH INTERNAL UPPER DRAWER - (SOFT CLOSE DRAWERS ONLY RE THIS ITEM)



FRONTALS

2No. 355 height x cab width
 1No. Internal drawer front



DRAWER BOXES: (Shallow)

	INTERNAL DRAWER FRONT	SOFT CLOSE
400mm wide cabinet requires 2No. 400mm drawer box	71/9104099	71/STDSIL:400/70/30
450mm wide cabinet requires 2No. 450mm drawer box	71/9104100	71/STDSIL:450/70/30
500mm wide cabinet requires 2No. 500mm drawer box	71/9104101	71/STDSIL:500/70/30
600mm wide cabinet requires 2No. 600mm drawer box	71/9104102	71/STDSIL:600/70/30
800mm wide cabinet requires 2No. 800mm drawer box	71/9104103	71/STDSIL:400/70/30
900mm wide cabinet requires 2No. 900mm drawer box	71/9104104	71/STDSIL:450/70/30
1000mm wide cabinet requires 2No. 1000mm drawer box	71/9104105	71/STDSIL:500/70/30
1200mm wide cabinet requires 2No. 1200mm drawer box	71/9104106	71/STDSIL:600/70/30

DRAWER BOXES: (Deep pan)

	INTERNAL DRAWER FRONT	SOFT CLOSE
400mm wide cabinet requires 1No. 400mm drawer box	N/A	71/PANSIL:400/70/30
450mm wide cabinet requires 1No. 450mm drawer box	N/A	71/PANSIL:450/70/30
500mm wide cabinet requires 1No. 500mm drawer box	N/A	71/PANSIL:500/70/30
600mm wide cabinet requires 1No. 600mm drawer box	N/A	71/PANSIL:600/70/30
800mm wide cabinet requires 1No. 800mm drawer box	N/A	71/PANSIL:800/70/30
900mm wide cabinet requires 1No. 900mm drawer box	N/A	71/PANSIL:900/70/30
1000mm wide cabinet requires 1No. 1000mm drawer box	N/A	71/PANSIL:1000/70/30
1200mm wide cabinet requires 1No. 1200mm drawer box	N/A	71/PANSIL:1200/70/30

BLANKED CORNER BASE

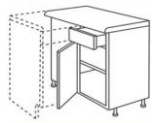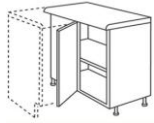


	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
HINGES:			
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	<input type="text"/>
DRAWER BOXES: (shallow)			
800mm wide cabinet requires 1No. 400mm drawer box	24/DM.S45.40W	71/STDSIL:400/70/30	<input type="text"/>
900mm wide cabinet requires 1No. 450mm drawer box	24/DM.S45.45W	71/STDSIL:450/70/30	<input type="text"/>
1000mm wide cabinet requires 1No. 500mm drawer box	24/DM.S45.50W	71/STDSIL:500/70/30	<input type="text"/>
1200mm wide cabinet requires 1No. 600mm drawer box	24/DM.S45.60W	71/STDSIL:600/70/30	<input type="text"/>

NOTE:
 ** The blanked panel and door widths are flexible so worth considering what best suits your needs.
 ** When selecting wirework or internal corner systems check hinge requirements.

FRONTALS
 1No. 715 height x width

FRONTALS
 1No. 140 height x width
 1No. 570 height x width

L-SHAPED 900mm x 900mm CORNER BASE WITH BI-FOLD DOORS

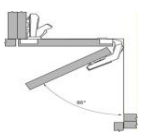

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
HINGES:			
Door affixed to cabinet requires 2No. 165 degree hinges	71/9084697	24/IS.WH5.00N	<input type="text"/>
Door requires 2No. Back plates (Either 0mm/2mm)	71/9071625	24/IB.A16.02N	<input type="text"/>
B-fold door hinge required to connect doors - 2No.	71/45036 T42	N/A	<input type="text"/>
B-fold door hinge back plate required to connect doors - 2No.	71/43017	N/A	<input type="text"/>

NOTE:
 ** Door width calculation is based upon door thickness of 18mm - adjust accordingly for different door thicknesses

FRONTALS
 2No. 715 height x 313mm

DOOR HINGE SET UP

DIAGONAL 900mm x 900mm CORNER BASE WITH SINGLE DOOR



	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
HINGES:			
Door requires 2No. 45 degree hinges	71/48906	71/9085168	<input type="text"/>
Door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	<input type="text"/>

FRONTALS
 1No. 715 height x 446mm

SPLAYED END BASE - 360mm width



	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
HINGES:			
Door requires 2No. 30 degree hinges	71/77690	71/9085166	<input type="text"/>
Door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	<input type="text"/>

NOTE:
 ** Hinges above relate to the door being hinged on the shallower gable.

FRONTALS
 1No. 715 height x 396mm

**CURVED END BASE
 300 x 300mm**

**SINGLE DOOR BASE
 260mm Width**



	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
HINGES:			
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	<input type="text"/>

NOTE:
 **The curved cabinet is manufactured to suit the door radius - You will need to provide this information if not purchasing the door from us.
 **These two cabinets (purchased as separate items) make up the base end arrangement totalling 560mm depth.
 **Remember to also order the matched curve plinth from the door frontal collection and not the cabinet selection.

FRONTALS
 1No. 715 height x CURVED

FRONTALS
 1No. 715 height x 256mm

Space for notes with horizontal lines.

LARDER/BROOM CABINET - Single door



HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 3No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 3No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

NOTE:
 ** Door can be drilled for whatever number of hinges you may require. Above is our standard recommendation
 ** When selecting wirework or internal drawer systems check hinge requirements

FRONTALS
 1No. 1965 height x width

LARDER/BROOM CABINET - Two door



HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Smaller door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Smaller door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	
Taller door requires 3No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Taller door requires 3No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

NOTE:
 ** Door height set up can be flexible, just check with the height & width of doors available within your chosen frontal collection
 ** When selecting wirework or internal drawer systems check hinge requirements

FRONTALS
 1No. 715 height x width
 1No. 1245 height x width

INTEGRATED COOL APPLIANCE HOUSING



NOTE:
 Door configurations are too numerous to list in simple form as there is many differing appliance models by the many manufactures.
 ** Door configuration dependent upon manufacturer/model that you select.
 ** Ensure the correct door configuration is available in your chosen door collection prior to purchasing any appliance.
 ** Check installation requirements as many models do not require additional hinges for instance.
 ** Always be aware of individual manufacturer/model install requirements such as ventilation.

FRONTALS
 VARIOUS height x 596mm


INTEGRATED COOKING APPLIANCE HOUSING



NOTE:
 Door configurations are too numerous to list in simple form as there is many differing appliance models by the many manufactures. Here we show just three typical types, single cavity, double cavity and drawers to lower part.
 ** Utilise our universal oven housings to house your choice of appliance(s).
 ** Door configuration dependent upon manufacturer/model that you select.
 ** Ensure the correct door configuration is available in your chosen door collection prior to purchasing any appliance.
 ** Check installation requirements as many models do not require additional hinges for instance.
 ** Always be aware of individual manufacturer/model install requirements such as ventilation.

FRONTALS
 VARIOUS height x 596mm

SINGLE & DOUBLE DOOR WALL CABINET - 575mm HEIGHT

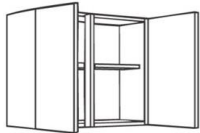

HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

FRONTALS
 1No. 570 height x cab width

FRONTALS
 2No. 570 height x cab width


Space for your notes with horizontal lines.

SINGLE & DOUBLE DOOR WALL CABINET - 720mm HEIGHT



FRONTALS

1No. 715 height x cab width

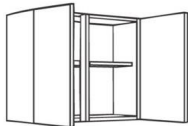

FRONTALS

2No. 715 height x cab width


HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

SINGLE & DOUBLE DOOR WALL CABINET - 900mm HEIGHT



FRONTALS

1No. 895 height x cab width

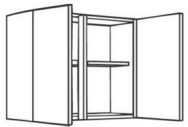

FRONTALS

2No. 895 height x cab width

HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

BRIDGE / TOP BOX WALL CABINET - 290mm HEIGHT



FRONTALS

1No. 283 height x cab width

HINGES: cabinets less than 800mm wide	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	
Each door requires 1No. stays	71/9132672	71/9132672	

HINGES: cabinets greater than 800mm wide	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 3No. 110 degree hinges	71/1072954	71/9071205	
Each door requires 3No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	
Each door requires 2No. stays	71/9132672	71/9132672	

BRIDGE / TOP BOX WALL CABINET - 360mm HEIGHT




FRONTALS

1No. 355 height x cab width

HINGES: cabinets up to 800mm wide	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	
Each door requires 1No. stays	71/9132672	71/9132672	

HINGES: cabinets greater than 800mm wide	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 3No. 110 degree hinges	71/1072954	71/9071205	
Each door requires 3No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	
Each door requires 2No. stays	71/9132672	71/9132672	

BLANKED CORNER WALL - 575mm / 720mm & 900mm HEIGHT

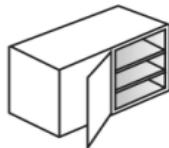

FRONTALS



1No. 570 height x cab width
1No. 715 height x cab width
1No. 895 height x cab width

HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

NOTE:
** The blanked panel and door widths are flexible so worth considering what best suits your needs.

Space for notes with horizontal lines.

L-SHAPED 600mm x 600mm CORNER WALL WITH BI-FOLD DOORS - 575mm / 720mm / 900mm HEIGHT

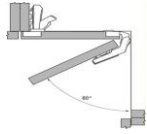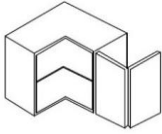

FRONTALS

2No. 570 height x 273mm
2No. 715 height x 273mm
2No. 895 height x 273mm

DOOR HINGE SET UP


HINGES:

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Door affixed to cabinet requires 2No. 165 degree hinges	71/9084697	24/IS.WH5.00N	<input type="text"/>
Door requires 2No. Back plates (Either 0mm/2mm)	71/9071625	24/IB.A16.02N	
B-fold door hinge required to connect doors - 2No.	71/45036 T42	N/A	<input type="text"/>
B-fold door hinge back plate required to connect doors - 2No.	71/43017	N/A	

NOTE:

** Door width calculation is based upon door thickness of 18mm - adjust accordingly for different door thicknesses

DIAGONAL 600mm x 600mm CORNER WALL WITH SINGLE DOOR - 575mm / 720mm / 900mm HEIGHT

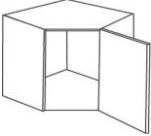

FRONTALS

1No. 570 height x 396mm
1No. 715 height x 396mm
1No. 895 height x 396mm

RECOMMENDED PRODUCT CODES

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

HINGES:

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Door requires 2No. 30 degree hinges	71/77690	71/9085166	<input type="text"/>
Door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

NOTE:

** Hinges above relate to the door being hinged on the shallower gable.

SPLAYED END WALL - 360mm width and 575mm / 720mm / 900mm HEIGHT



FRONTALS

1No. 570 height x 396mm
1No. 715 height x 396mm
1No. 895 height x 396mm


RECOMMENDED PRODUCT CODES

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

NOTE:

**The curved cabinet is manufactured to suit the door radius - You will need to provide this information if not purchasing the door from us.
**Remember to also order the matched curve cornice & pelmet from the door frontal collection.

CURVED END WALL - 300mm X 300mm



FRONTALS

1No. 570 height x CURVED
1No. 715 height x CURVED
1No. 895 height x CURVED

RECOMMENDED PRODUCT CODES

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

DRAWER BOXES: (shallow)

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
300mm wide cabinet requires 1No. 300mm drawer box	N/A	71/DRESIL:300/70/30	<input type="text"/>
400mm wide cabinet requires 1No. 400mm drawer box	N/A	71/DRESIL:400/70/30	
450mm wide cabinet requires 1No. 450mm drawer box	N/A	71/DRESIL:450/70/30	<input type="text"/>
500mm wide cabinet requires 1No. 500mm drawer box	24/DM.651.DRE50	71/DRESIL:500/70/30	
600mm wide cabinet requires 1No. 600mm drawer box	24/DM.651.DRE60	71/DRESIL:600/70/30	<input type="text"/>

FRONTALS

1No. 895 height x cab width
1No. 140 height x cab width

Space for notes with horizontal lines.

DRESSER CABINET - 1210mm HEIGHT



FRONTALS
 1No. 895 height x cab width
 2No. 140 height x cab width

HINGES:

Each door requires 2No. 110 degree hinges
 Each door requires 2No. Back plates (Either 0mm/2mm)

RECOMMENDED PRODUCT CODES

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625

QTY NEEDED

DRAWER BOXES: (shallow)

300mm wide cabinet requires 2No. 300mm drawer box
 400mm wide cabinet requires 2No. 400mm drawer box
 450mm wide cabinet requires 2No. 450mm drawer box
 500mm wide cabinet requires 2No. 500mm drawer box
 600mm wide cabinet requires 2No. 600mm drawer box

STANDARD SOFT CLOSE

STANDARD	SOFT CLOSE
N/A	71/DRESIL:300/70/30
N/A	71/DRESIL:400/70/30
N/A	71/DRESIL:450/70/30
24/DM.651.DRE50	71/DRESIL:500/70/30
24/DM.651.DRE60	71/DRESIL:600/70/30

DRESSER CABINET - 1390mm HEIGHT



FRONTALS
 1No. 895 height x cab width
 2No. 140 height x cab width
 1No. 175 height x cab width

HINGES:

Each door requires 2No. 110 degree hinges
 Each door requires 2No. Back plates (Either 0mm/2mm)

RECOMMENDED PRODUCT CODES

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625

DRAWER BOXES: (shallow)

500mm wide cabinet requires 3No. 500mm drawer box
 600mm wide cabinet requires 3No. 600mm drawer box

STANDARD SOFT CLOSE

STANDARD	SOFT CLOSE
24/DM.S45.50W	71/STD5IL:500/70/30
24/DM.S45.60W	71/STD5IL:600/70/30

CUTLERY TRAY FOR STANDARD DRAWERS - MOULDED WHITE ACRYLIC




CUTLERY TRAY: (shallow drawer)

300mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 350mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 400mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 450mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 500mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 600mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED

STANDARD ONLY

71/44924	
71/44923	
71/44922	
71/44921	
71/44919	
71/44918	

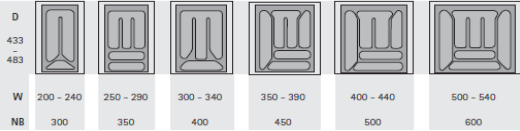

CUTLERY TRAY FOR SOFT CLOSE DRAWERS - MOULDED SILVER ACRYLIC



CUTLERY TRAY: (shallow drawer)

300mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 350mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 400mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 450mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 500mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 600mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 800mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 900mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 1000mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED
 1200mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED

SOFT CLOSE ONLY

71/44954	
71/44953	
71/44952	
71/44951	
71/44949	
71/44947	
71/44946	
71/44945	
71/44944	
71/44943	

CUTLERY TRAY WITH ADJUSTABLE SECTIONING FOR SOFT CLOSE DRAWERS - MOULDED SILVER ACRYLIC



FLEXIBLE PRODUCT
 The sections within this product are flexible and can be re positioned at any time.

CUTLERY TRAY: (shallow drawer)

300mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 350mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 400mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 450mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 500mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 600mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 800mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 900mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 1000mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER
 1200mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER

SOFT CLOSE ONLY

71/13301	
71/13302	
71/13303	
71/13304	
71/13305	
71/13306	
71/13307	
71/13308	
71/13309	
71/13310	
