

# FURNITURE COMPONENTS UK LIMITED (FCUK LTD)

FCUK LTD are a furniture components provider supplying a hinge through to a complete project. As a result of this the options available to you are extensive, providing you ultimately with what is probably the greatest flexibility for design.

As there are so many configurations of cabinet specification available to you this document is designed to assist you in selecting from the most common of cabinet options. Please advise if you do not see what you are looking for and we will assist as appropriate.

Some frontal collections that we have available are standard sizes only. Where bespoke 'made to order' sizes are available this will generally be confirmed on the actual product page on our website.

**PRODUCT FEATURED ON OUR WEBSITE IS ONLY A SELECTION OF WHAT WE HAVE AVAILABLE!**

## NOTES TO CONSIDER IN USING THIS DOCUMENT:

\*\* Line drawings are for visual purposes only and do not constitute any agreed specification.

\*\* Once you have selected your frontal collection, always check that the frontal sizes that you require are available as you progress.

\*\* Each product section gives an indication of frontal ( doors/drawers) sizing to create a complete cabinet

\*\* Each product section gives our recommended hinge and fittings to create a complete cabinet. Alternatively you can select from the wider range of product available on our website.

\*\* FCUK LTD has many fittings available, however, inputting the recommended product code(s) as detailed will help you to locate the most common/practical fittings for the cabinet(s).

\*\* Appliance housings require the appliance aperture requirements to be detailed to us if we are to supply in RIGID cabinet format. Our flat packed product is universal and will cater for most appliance arrangements, though you may need to consider extra panels just in the case of need an extra shelf or two.


\*\* The standard hinge set up is 'non soft close', however, with many now wanting the 'soft close' versions we have detailed both options in each product section.

\*\* Circle the hinge/fitting type that you require in each section and enter the quantity needed in the box. Hopefully this will assist you in collating the total number of hinges/fittings need to complete your design.

\*\* Please be reminded of our 'delivery area' information as detailed on our website.

**For further information and/or assistance please call our office or email your requirements and we will be happy to assist.**

**SINGLE & DOUBLE DOOR BASE CABINET**

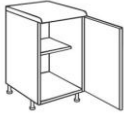

**FRONTALS**

1No. 715 height x cab width



**FRONTALS**

2No. 715 height x cab width

**HINGES:**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)

**RECOMMENDED PRODUCT CODES**

	STANDARD	SOFT CLOSE
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625

**QTY**


**SINGLE & DOUBLE DOOR BASE CABINET WITH DRAWER(S)**



**FRONTALS**

1No. 140 height x cab width  
 1No. 570 height x cab width



**FRONTALS**

2No. 140 height x cab width  
 2No. 570 height x cab width

**HINGES:**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)


**RECOMMENDED PRODUCT CODES**

	STANDARD	SOFT CLOSE
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625


**DRAWER BOXES: ( shallow )**

	STANDARD	SOFT CLOSE
300mm wide cabinet requires 1No. 300mm drawer box	24/DM.S45.30W	71/STDSIL:300/70/30
400mm wide cabinet requires 1No. 400mm drawer box	24/DM.S45.40W	71/STDSIL:400/70/30
450mm wide cabinet requires 1No. 450mm drawer box	24/DM.S45.45W	71/STDSIL:450/70/30
500mm wide cabinet requires 1No. 500mm drawer box	24/DM.S45.50W	71/STDSIL:500/70/30
600mm wide cabinet requires 1No. 600mm drawer box	24/DM.S45.60W	71/STDSIL:600/70/30
800mm wide cabinet requires 2No. 800mm drawer box	24/DM.S45.40W	71/STDSIL:400/70/30
900mm wide cabinet requires 2No. 900mm drawer box	24/DM.S45.45W	71/STDSIL:450/70/30
1000mm wide cabinet requires 2No. 1000mm drawer box	24/DM.S45.50W	71/STDSIL:500/70/30
1200mm wide cabinet requires 2No. 1200mm drawer box	24/DM.S45.60W	71/STDSIL:600/70/30


**TWO DRAWER BASE CABINET**



**FRONTALS**

2No. 355 height x cab width

**DRAWER BOXES: ( Deep pan )**

	STANDARD	SOFT CLOSE
400mm wide cabinet requires 2No. 400mm drawer box	24/DM.D45.50W	71/PANSIL:400/70/30
450mm wide cabinet requires 2No. 450mm drawer box	24/DM.D45.50W	71/PANSIL:450/70/30
500mm wide cabinet requires 2No. 500mm drawer box	24/DM.D45.50W	71/PANSIL:500/70/30
600mm wide cabinet requires 2No. 600mm drawer box	24/DM.D45.60W	71/PANSIL:600/70/30
800mm wide cabinet requires 2No. 800mm drawer box	24/DM.D45.80W	71/PANSIL:800/70/30
900mm wide cabinet requires 2No. 900mm drawer box	24/DM.D45.90W	71/PANSIL:900/70/30
1000mm wide cabinet requires 2No. 1000mm drawer box	24/DM.D45.100W	71/PANSIL:1000/70/30
1200mm wide cabinet requires 2No. 1200mm drawer box	71/PANSIL:1200/70/30	


**TWO DRAWER BASE CABINET WITH INTERNAL UPPER DRAWER - (SOFT CLOSE DRAWERS ONLY RE THIS ITEM)**



**FRONTALS**

2No. 355 height x cab width  
 1No. Internal drawer front

**DRAWER BOXES: ( Shallow )**

	INTERNAL DRAWER FRONT	SOFT CLOSE
400mm wide cabinet requires 2No. 400mm drawer box	71/9104099	71/STDSIL:400/70/30
450mm wide cabinet requires 2No. 450mm drawer box	71/9104100	71/STDSIL:450/70/30
500mm wide cabinet requires 2No. 500mm drawer box	71/9104101	71/STDSIL:500/70/30
600mm wide cabinet requires 2No. 600mm drawer box	71/9104102	71/STDSIL:600/70/30
800mm wide cabinet requires 2No. 800mm drawer box	71/9104103	71/STDSIL:400/70/30
900mm wide cabinet requires 2No. 900mm drawer box	71/9104104	71/STDSIL:450/70/30
1000mm wide cabinet requires 2No. 1000mm drawer box	71/9104105	71/STDSIL:500/70/30
1200mm wide cabinet requires 2No. 1200mm drawer box	71/9104106	71/STDSIL:600/70/30


**DRAWER BOXES: ( Deep pan )**

	INTERNAL DRAWER FRONT	SOFT CLOSE
400mm wide cabinet requires 1No. 400mm drawer box	N/A	71/PANSIL:400/70/30
450mm wide cabinet requires 1No. 450mm drawer box	N/A	71/PANSIL:450/70/30
500mm wide cabinet requires 1No. 500mm drawer box	N/A	71/PANSIL:500/70/30
600mm wide cabinet requires 1No. 600mm drawer box	N/A	71/PANSIL:600/70/30
800mm wide cabinet requires 1No. 800mm drawer box	N/A	71/PANSIL:800/70/30
900mm wide cabinet requires 1No. 900mm drawer box	N/A	71/PANSIL:900/70/30
1000mm wide cabinet requires 1No. 1000mm drawer box	N/A	71/PANSIL:1000/70/30
1200mm wide cabinet requires 1No. 1200mm drawer box	N/A	71/PANSIL:1200/70/30






**LARDER/BROOM CABINET - Single door**




HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 3No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 3No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

**NOTE:**  
 \*\* Door can be drilled for whatever number of hinges you may require. Above is our standard recommendation  
 \*\* When selecting wirework or internal drawer systems check hinge requirements

**FRONTALS**  
 1No. 1965 height x width

**LARDER/BROOM CABINET - Two door**



HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Smaller door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Smaller door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	
Taller door requires 3No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Taller door requires 3No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

**NOTE:**  
 \*\* Door height set up can be flexible, just check with the height & width of doors available within your chosen frontal collection  
 \*\* When selecting wirework or internal drawer systems check hinge requirements

**FRONTALS**  
 1No. 715 height x width  
 1No. 1245 height x width

**INTEGRATED COOL APPLIANCE HOUSING**



**NOTE:**  
 Door configurations are too numerous to list in simple form as there is many differing appliance models by the many manufactures.  
 \*\* Door configuration dependent upon manufacturer/model that you select.  
 \*\* Ensure the correct door configuration is available in your chosen door collection prior to purchasing any appliance.  
 \*\* Check installation requirements as many models do not require additional hinges for instance.  
 \*\* Always be aware of individual manufacturer/model install requirements such as ventilation.

**FRONTALS**  
 VARIOUS height x 596mm



**INTEGRATED COOKING APPLIANCE HOUSING**



**NOTE:**  
 Door configurations are too numerous to list in simple form as there is many differing appliance models by the many manufactures. Here we show just three typical types, single cavity, double cavity and drawers to lower part.  
 \*\* Utilise our universal oven housings to house your choice of appliance(s).  
 \*\* Door configuration dependent upon manufacturer/model that you select.  
 \*\* Ensure the correct door configuration is available in your chosen door collection prior to purchasing any appliance.  
 \*\* Check installation requirements as many models do not require additional hinges for instance.  
 \*\* Always be aware of individual manufacturer/model install requirements such as ventilation.

**FRONTALS**  
 VARIOUS height x 596mm

**SINGLE & DOUBLE DOOR WALL CABINET - 575mm HEIGHT**

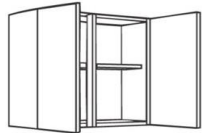

HINGES:	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

**FRONTALS**  
 1No. 570 height x cab width

**FRONTALS**  
 2No. 570 height x cab width


Space for your notes with horizontal lines.

**SINGLE & DOUBLE DOOR WALL CABINET - 720mm HEIGHT**



**FRONTALS**

1No. 715 height x cab width

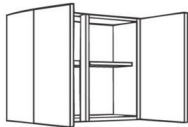

**FRONTALS**

2No. 715 height x cab width

**HINGES:**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)

**RECOMMENDED PRODUCT CODES**

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625

**QTY**


NEEDED

**SINGLE & DOUBLE DOOR WALL CABINET - 900mm HEIGHT**



**FRONTALS**

1No. 895 height x cab width

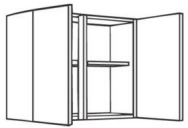

**FRONTALS**

2No. 895 height x cab width

**HINGES:**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)

**RECOMMENDED PRODUCT CODES**

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625


**BRIDGE / TOP BOX WALL CABINET - 290mm HEIGHT**



**FRONTALS**

1No. 283 height x cab width

**HINGES: cabinets less than 800mm wide**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)  
 Each door requires 1No. stays

**RECOMMENDED PRODUCT CODES**

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625
71/9132672	71/9132672


**HINGES: cabinets greater than 800mm wide**

Each door requires 3No. 110 degree hinges  
 Each door requires 3No. Back plates (Either 0mm/2mm)  
 Each door requires 2No. stays

**RECOMMENDED PRODUCT CODES**

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625
71/9132672	71/9132672


**BRIDGE / TOP BOX WALL CABINET - 360mm HEIGHT**



**FRONTALS**

1No. 355 height x cab width

**HINGES: cabinets up to 800mm wide**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)  
 Each door requires 1No. stays

**RECOMMENDED PRODUCT CODES**

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625
71/9132672	71/9132672



**HINGES: cabinets greater than 800mm wide**

Each door requires 3No. 110 degree hinges  
 Each door requires 3No. Back plates (Either 0mm/2mm)  
 Each door requires 2No. stays

**RECOMMENDED PRODUCT CODES**

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625
71/9132672	71/9132672


**BLANKED CORNER WALL - 575mm / 720mm & 900mm HEIGHT**

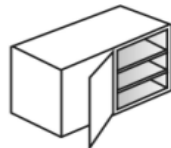

**FRONTALS**

1No. 570 height x cab width  
 1No. 715 height x cab width  
 1No. 895 height x cab width

**HINGES:**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)

**RECOMMENDED PRODUCT CODES**



STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625


**NOTE:**

\*\* The blanked panel and door widths are flexible so worth considering what best suits your needs.

Space for notes with horizontal lines.

**L-SHAPED 600mm x 600mm CORNER WALL WITH BI-FOLD DOORS - 575mm / 720mm / 900mm HEIGHT**

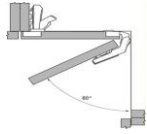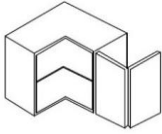

**FRONTALS**

2No. 570 height x 273mm  
2No. 715 height x 273mm  
2No. 895 height x 273mm

**DOOR HINGE SET UP**


**HINGES:**

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Door affixed to cabinet requires 2No. 165 degree hinges	71/9084697	24/IS.WH5.00N	<input type="text"/>
Door requires 2No. Back plates (Either 0mm/2mm)	71/9071625	24/IB.A16.02N	
B-fold door hinge required to connect doors - 2No.	71/45036 T42	N/A	<input type="text"/>
B-fold door hinge back plate required to connect doors - 2No.	71/43017	N/A	

**NOTE:**

\*\* Door width calculation is based upon door thickness of 18mm - adjust accordingly for different door thicknesses

**DIAGONAL 600mm x 600mm CORNER WALL WITH SINGLE DOOR - 575mm / 720mm / 900mm HEIGHT**

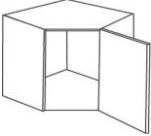

**FRONTALS**

1No. 570 height x 396mm  
1No. 715 height x 396mm  
1No. 895 height x 396mm

**HINGES:**

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

**SPLAYED END WALL - 360mm width and 575mm / 720mm / 900mm HEIGHT**



**FRONTALS**

1No. 570 height x 396mm  
1No. 715 height x 396mm  
1No. 895 height x 396mm


**HINGES:**

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Door requires 2No. 30 degree hinges	71/77690	71/9085166	<input type="text"/>
Door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

**NOTE:**

\*\* Hinges above relate to the door being hinged on the shallower gable.

**CURVED END WALL - 300mm X 300mm**



**FRONTALS**

1No. 570 height x CURVED  
1No. 715 height x CURVED  
1No. 895 height x CURVED


**HINGES:**

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

**NOTE:**

\*\*Remember to also order the matched curve cornice & pelmet from the door frontal collection.

**DRESSER CABINET - 1065mm HEIGHT**



**FRONTALS**

1No. 895 height x cab width  
1No. 140 height x cab width

**HINGES:**

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
Each door requires 2No. 110 degree hinges	71/1072954	71/9071205	<input type="text"/>
Each door requires 2No. Back plates (Either 0mm/2mm)	71/1071625	71/9071625	

**DRAWER BOXES: ( shallow )**

	RECOMMENDED PRODUCT CODES		QTY NEEDED
	STANDARD	SOFT CLOSE	
300mm wide cabinet requires 1No. 300mm drawer box	N/A	71/DRESIL:300/70/30	<input type="text"/>
400mm wide cabinet requires 1No. 400mm drawer box	N/A	71/DRESIL:400/70/30	
450mm wide cabinet requires 1No. 450mm drawer box	N/A	71/DRESIL:450/70/30	<input type="text"/>
500mm wide cabinet requires 1No. 500mm drawer box	24/DM.651.DRE50	71/DRESIL:500/70/30	
600mm wide cabinet requires 1No. 600mm drawer box	24/DM.651.DRE60	71/DRESIL:600/70/30	<input type="text"/>

**DRESSER CABINET - 1210mm HEIGHT**



**FRONTALS**  
 1No. 895 height x cab width  
 2No. 140 height x cab width

**HINGES:**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)

**RECOMMENDED PRODUCT CODES**

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625

QTY NEEDED

**DRAWER BOXES: ( shallow )**

300mm wide cabinet requires 2No. 300mm drawer box  
 400mm wide cabinet requires 2No. 400mm drawer box  
 450mm wide cabinet requires 2No. 450mm drawer box  
 500mm wide cabinet requires 2No. 500mm drawer box  
 600mm wide cabinet requires 2No. 600mm drawer box

**STANDARD SOFT CLOSE**

STANDARD	SOFT CLOSE
N/A	71/DRESIL:300/70/30
N/A	71/DRESIL:400/70/30
N/A	71/DRESIL:450/70/30
24/DM.651.DRE50	71/DRESIL:500/70/30
24/DM.651.DRE60	71/DRESIL:600/70/30


**DRESSER CABINET - 1390mm HEIGHT**



**FRONTALS**  
 1No. 895 height x cab width  
 2No. 140 height x cab width  
 1No. 175 height x cab width

**HINGES:**

Each door requires 2No. 110 degree hinges  
 Each door requires 2No. Back plates (Either 0mm/2mm)

**RECOMMENDED PRODUCT CODES**

STANDARD	SOFT CLOSE
71/1072954	71/9071205
71/1071625	71/9071625


**DRAWER BOXES: ( shallow )**

500mm wide cabinet requires 3No. 500mm drawer box  
 600mm wide cabinet requires 3No. 600mm drawer box

**STANDARD SOFT CLOSE**

STANDARD	SOFT CLOSE
24/DM.S45.50W	71/STD5IL:500/70/30
24/DM.S45.60W	71/STD5IL:600/70/30


**CUTLERY TRAY FOR STANDARD DRAWERS - MOULDED WHITE ACRYLIC**




**CUTLERY TRAY: ( shallow drawer )**

300mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 350mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 400mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 450mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 500mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 600mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED

**STANDARD ONLY**

71/44924	
71/44923	
71/44922	
71/44921	
71/44919	
71/44918	

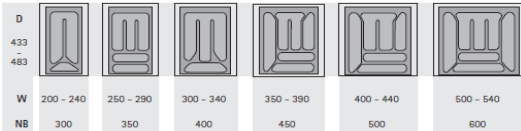**CUTLERY TRAY FOR SOFT CLOSE DRAWERS - MOULDED SILVER ACRYLIC**



**CUTLERY TRAY: ( shallow drawer )**

300mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 350mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 400mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 450mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 500mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 600mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 800mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 900mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 1000mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED  
 1200mm wide cabinet requires 1No. - TRIM TO SIZE IF NEEDED

**SOFT CLOSE ONLY**

71/44954	
71/44953	
71/44952	
71/44951	
71/44949	
71/44947	
71/44946	
71/44945	
71/44944	
71/44943	




**CUTLERY TRAY WITH ADJUSTABLE SECTIONING FOR SOFT CLOSE DRAWERS - MOULDED SILVER ACRYLIC**



**FLEXIBLE PRODUCT**  
 The sections within this product are flexible and can be re positioned at any time.

**CUTLERY TRAY: ( shallow drawer )**

300mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 350mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 400mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 450mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 500mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 600mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 800mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 900mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 1000mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER  
 1200mm wide cabinet requires 1No. - SPECIFIC SIZE TO SUIT DRAWER

**SOFT CLOSE ONLY**

71/13301	
71/13302	
71/13303	
71/13304	
71/13305	
71/13306	
71/13307	
71/13308	
71/13309	
71/13310	
